



PRO EXTENDED CANTILEVER MOUNT CVP-1

1
in

These USA made Pro Extended Cantilever Mounts provide the correct height and forward placement for proper riflescope mounting.

INCLUDED ▶ CVP-1 1" Extended Cantilever Mount ▶ (8) 5/16" CVP Screws ▶ T-15 Wrench


Attention: Ensure firearm is completely unloaded before making any modification. Unload, check inside the chamber, and remove any ammunition from the area.

Become familiar with the parts of the mount. **Note:** All torque specs are given as inch pounds (in-lbs) not foot pounds.

Installation Instructions

1. Loosen both nuts on the mount and install on your Picatinny style rail with the cantilever forward.
2. Push the mount towards the muzzle and tighten both hex nuts to 25-35 in-lbs.
3. Remove the four cap screws from each top cap with the T-15 wrench and remove the top caps.
4. Place your scope in the mount and replace the top caps and screws.
5. Slowly tighten the cap screws evenly and leave them loose enough to adjust for eye relief.
6. Level the reticle and tighten the cap screws in a criss cross pattern to 15-18 in-lbs.

Caution: Do not over tighten.

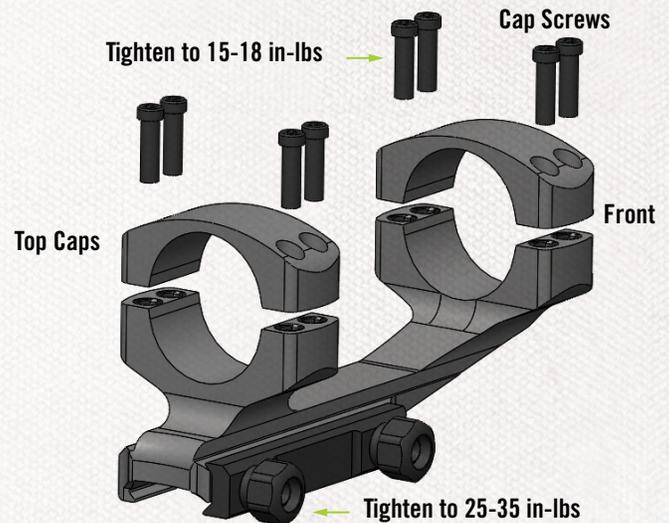

DO NOT OVER TIGHTEN
Excessive torque may cause damage to your scope